
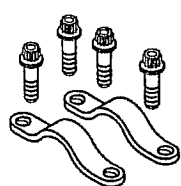


NOTE: The driveshaft diagram shown below is for illustration purposes only. The bus you're working on may or may not be built the same way.


U - JOINTS SUPPORT BEARINGS

DON'T SEE WHAT
YOU NEED?


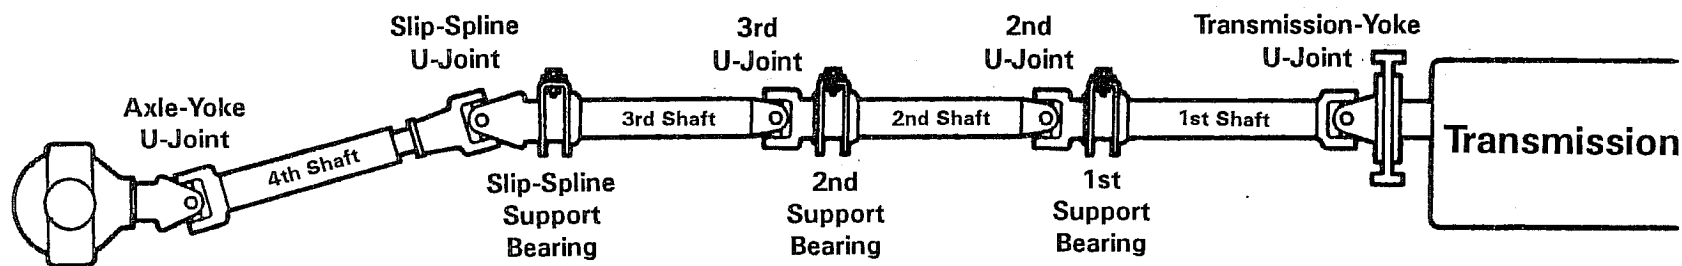


JK0275
Strap Kit


ROUND BEARINGS
WITH BACK-PLATES

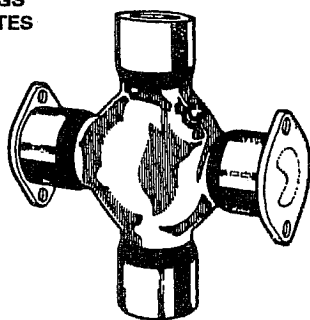

Type
A

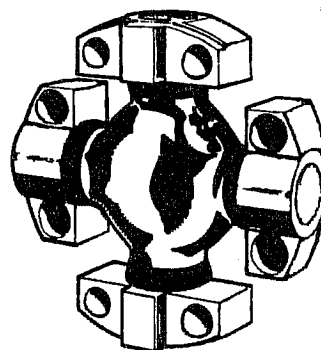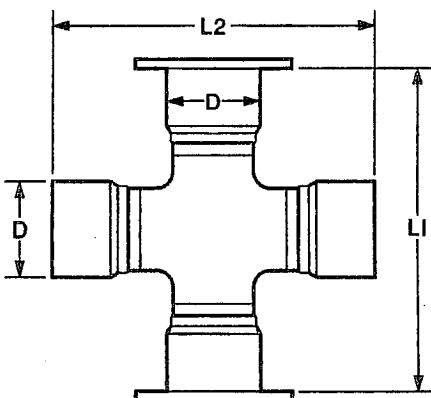


BLOCK
BEARINGS

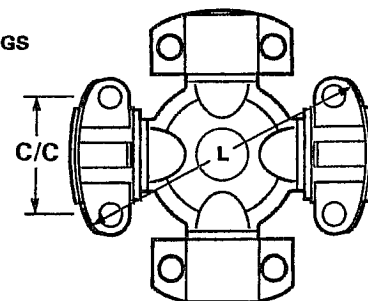


Type
B



Low Wing Drilled



Low Wing Threaded



High Wing Drilled





Delta Wing Threaded

U-Joint Part Numbers

JK0238	Ford
JK0239	GM
JK0240	Freightliner
JK0241	IH
JK0242	Blue Bird
JK0243	Thomas
JK0244	Carpenter

Type
C

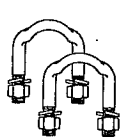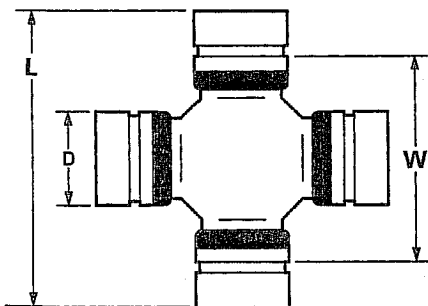


JK0274
U-Bolt Kit



JK0276
Snap-Ring Kit




JK0275
Strap Kit

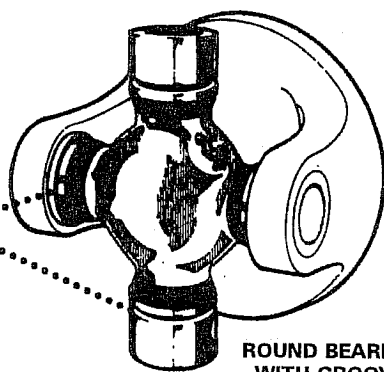


ROUND BEARINGS
WITH GROOVES


Type
D

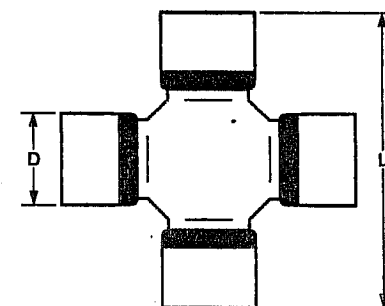

ROUND
BEARINGS


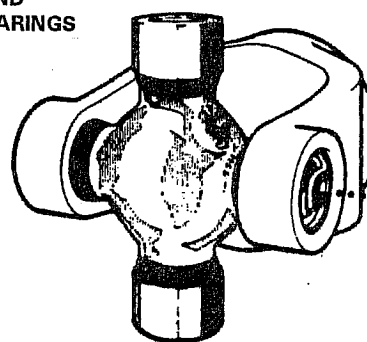


Snap-Ring Kit
JK0273

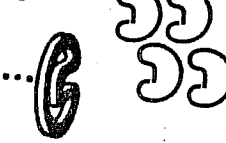



U-Bolt Kit
JK0274

JK0275
Strap Kit

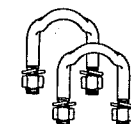

SUPPORT BEARINGS

SPICER STYLE

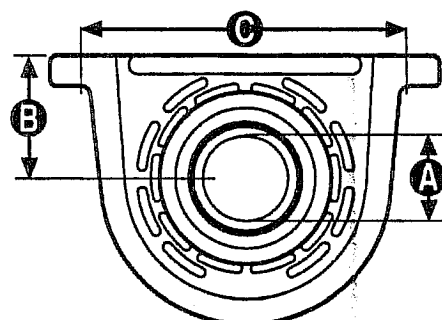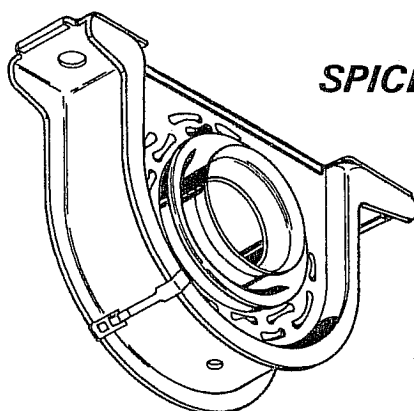

Part Numbers

JK0245	Ford
JK0246	GM
JK0247	Freightliner
JK0248	IH
JK0249	Blue Bird
JK0250	Thomas
JK0251	Carpenter

CLEVELAND
STYLE

